





Einbauanleitung

Installation instructions

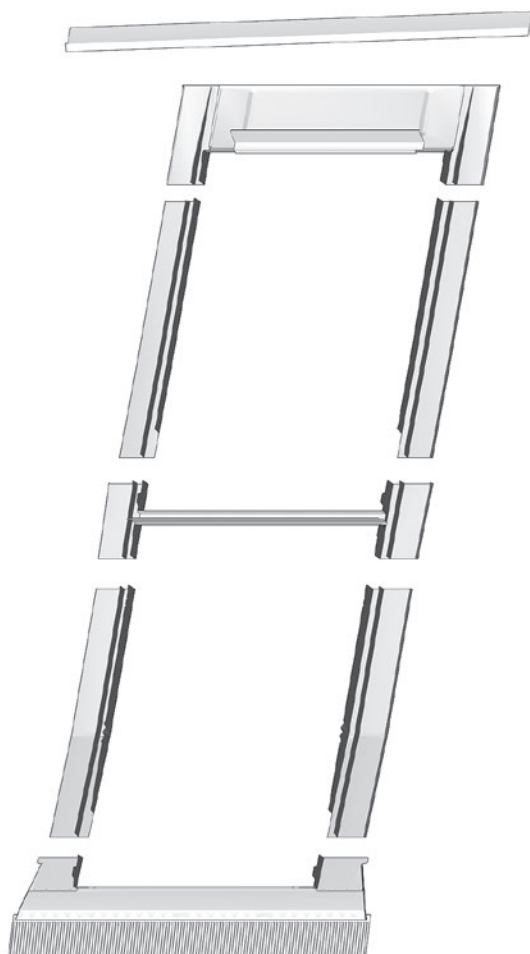


EDZ Rx 200 12 TU/TO

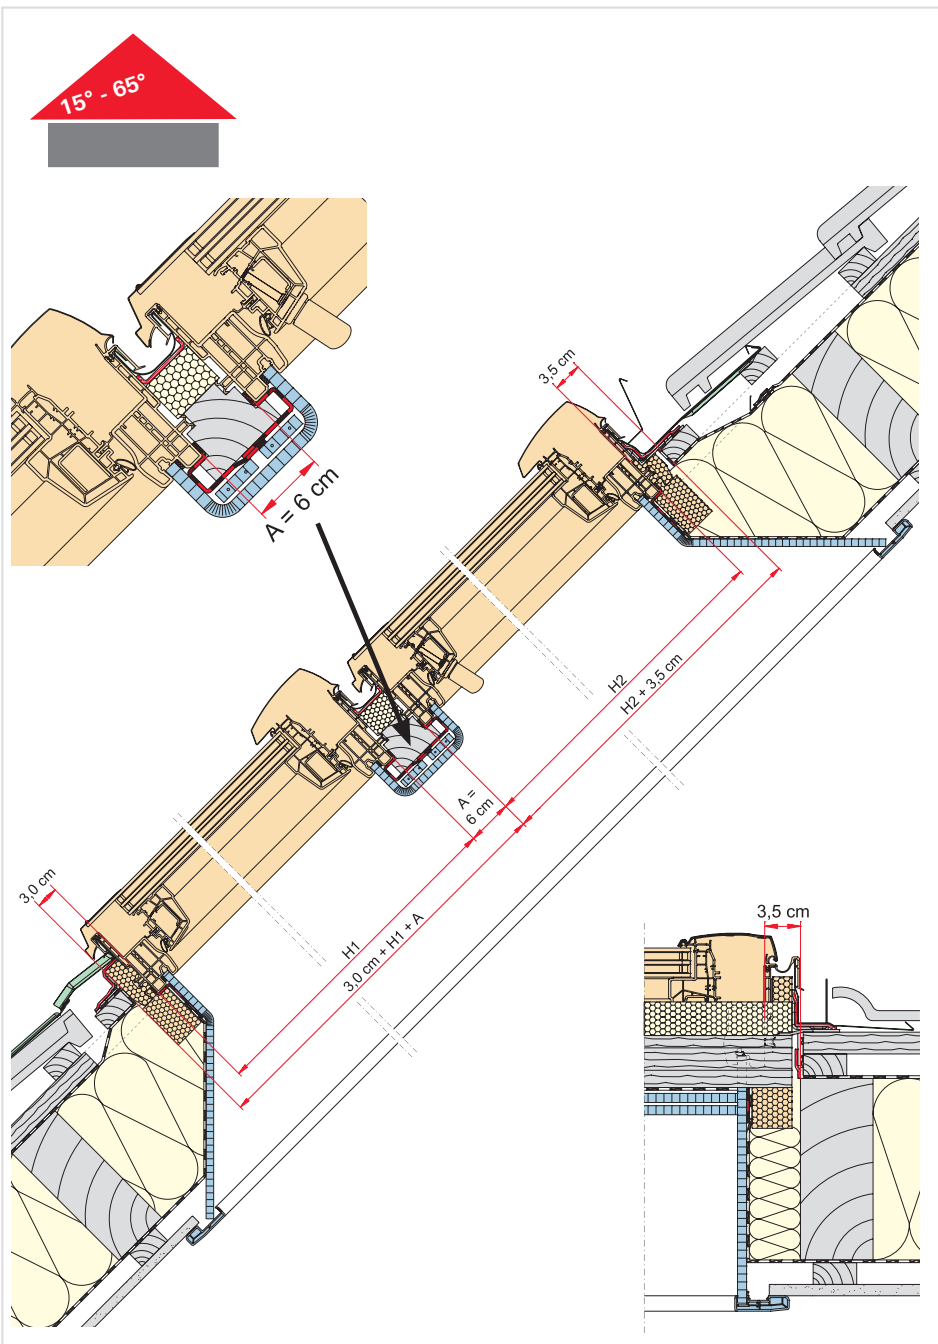

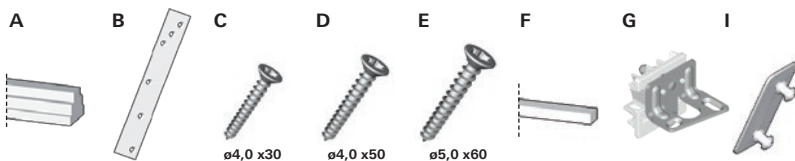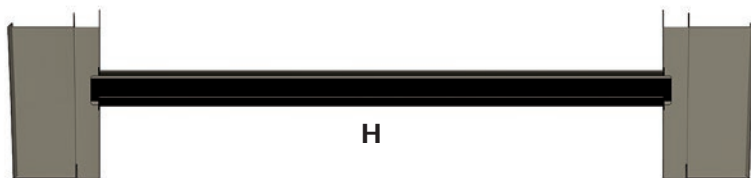






Rx 200	1	2	6	6		1	2	1
Rx 200 ≥ 09/xx	1	2	6	6	1	1	2	1

R6 200 **TU**

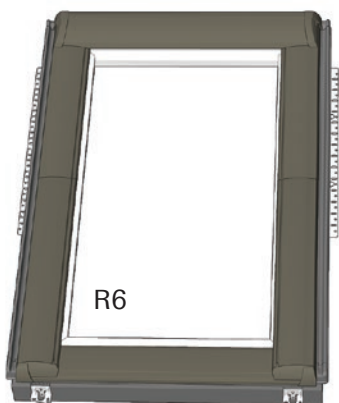

Rx 200 **TO**

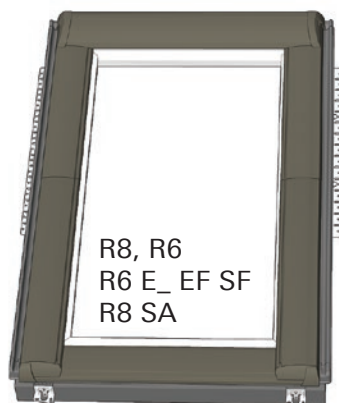

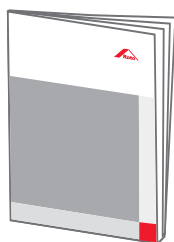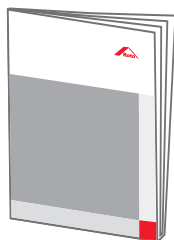





1




1 → ... 7


4

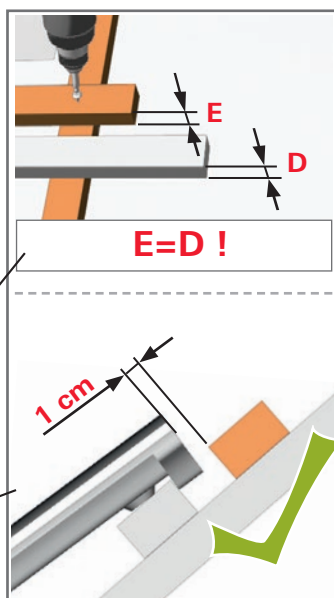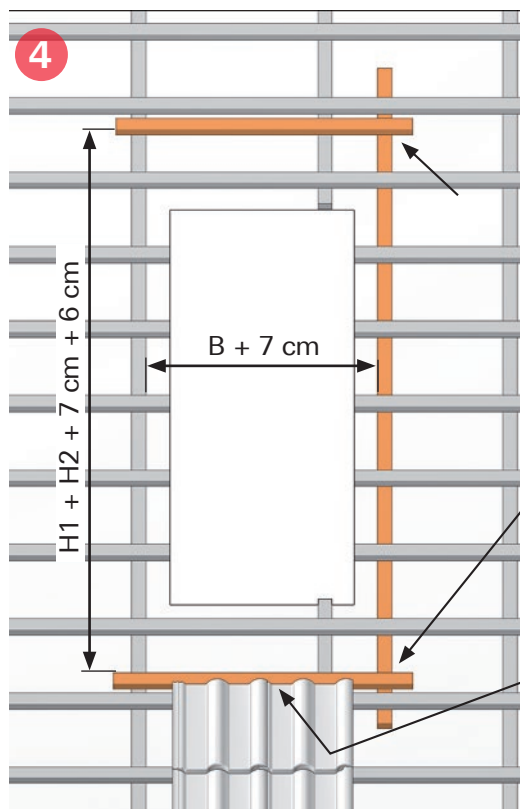

2

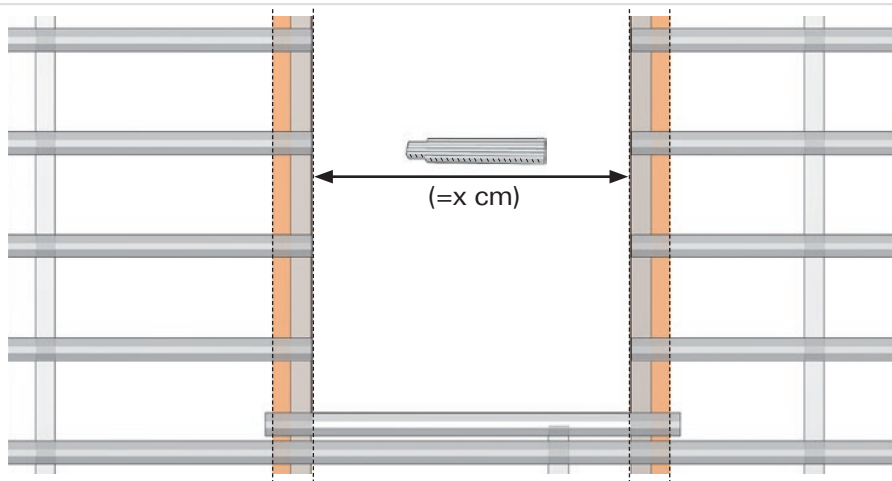

A 1x

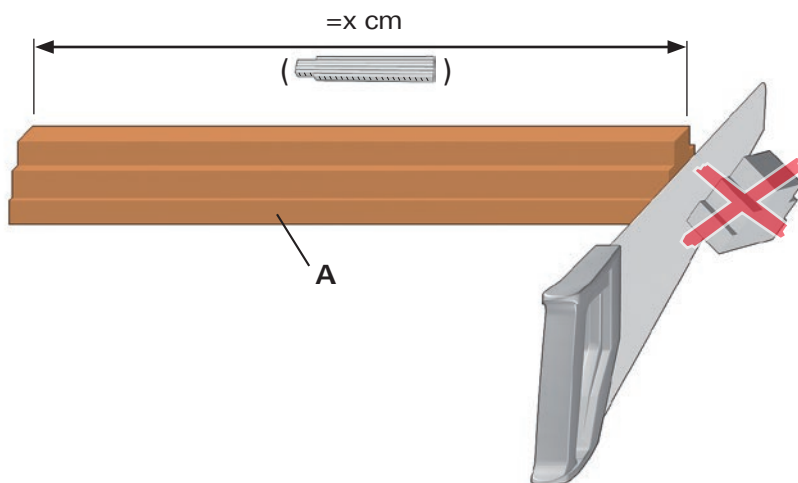

3





B 2x




D 2x 3



ø4,0 x50

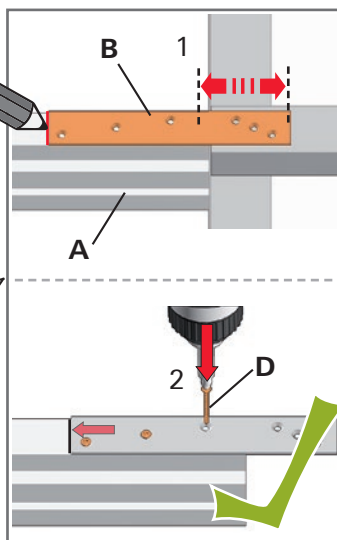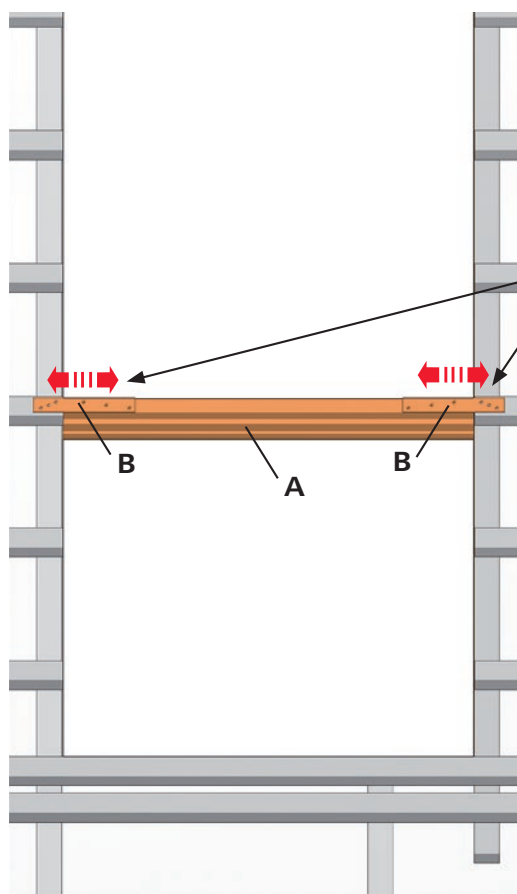

4 R6 200 TU

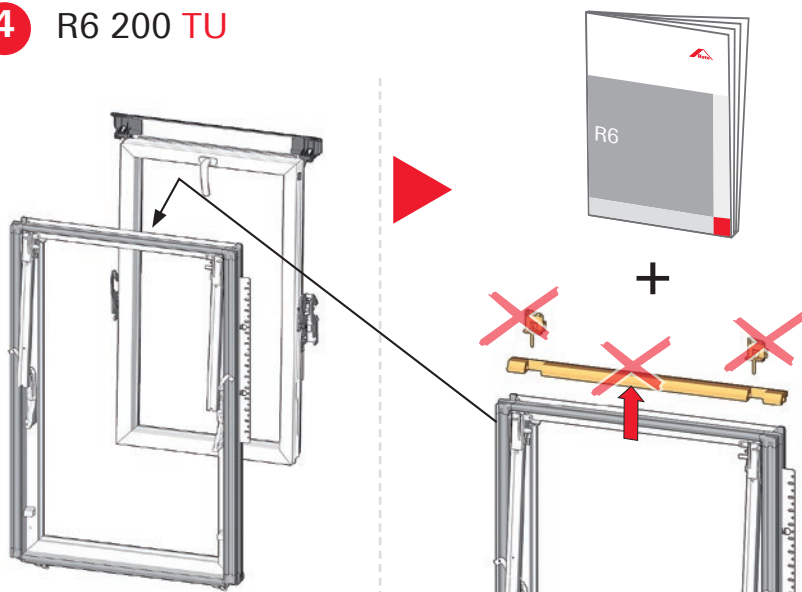

5


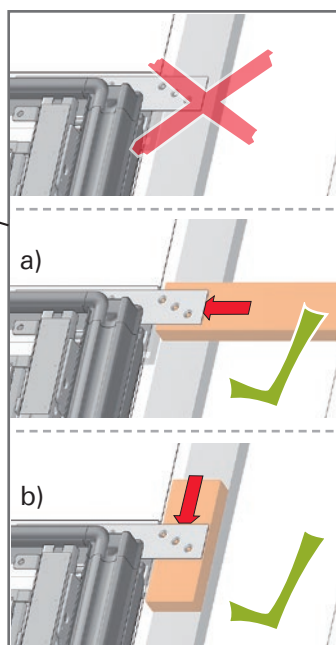
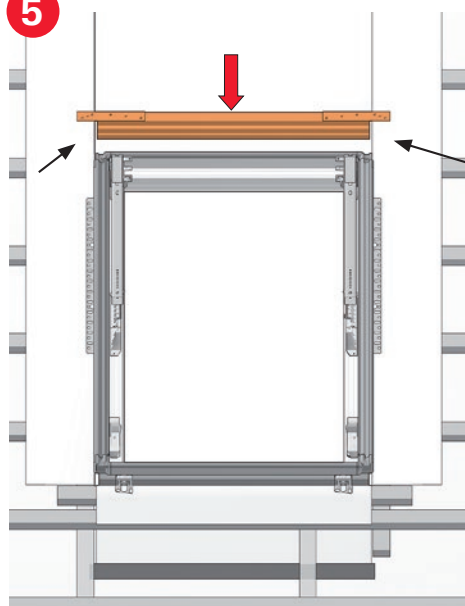


6



C 2x 2-3

ø4,0 x30

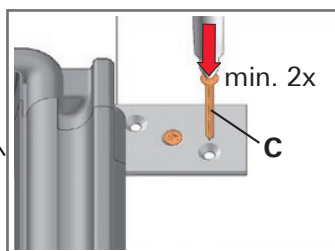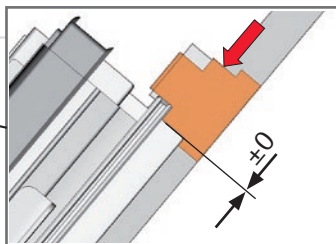
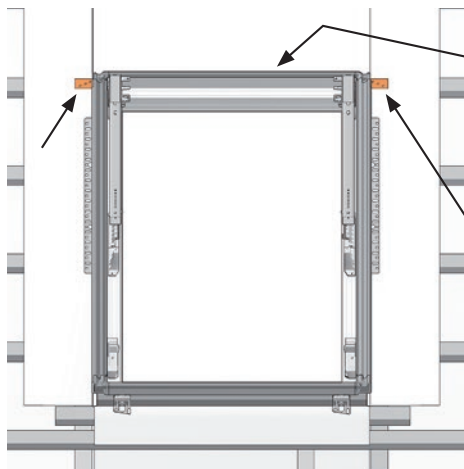


6a




E 1x

ø5,0 x60

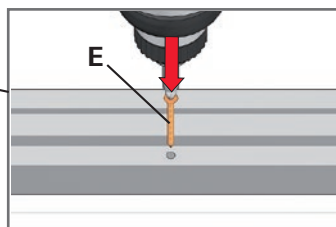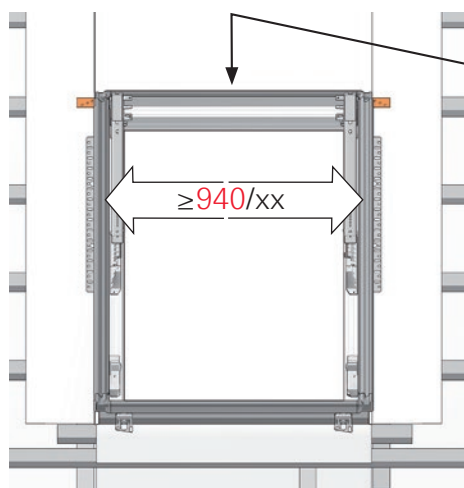

7 Rx 200 TO


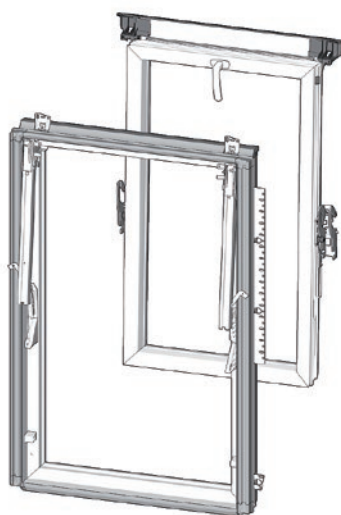


8




G 2x

Rx 200 K TO

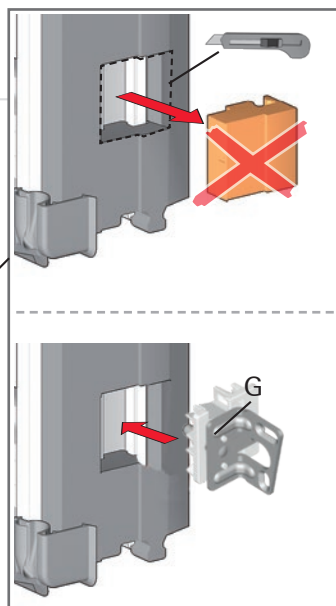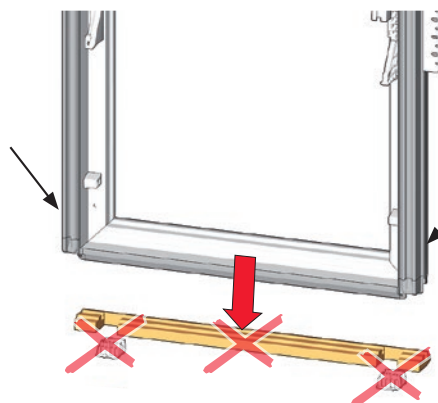


8

Rx 200 H TO


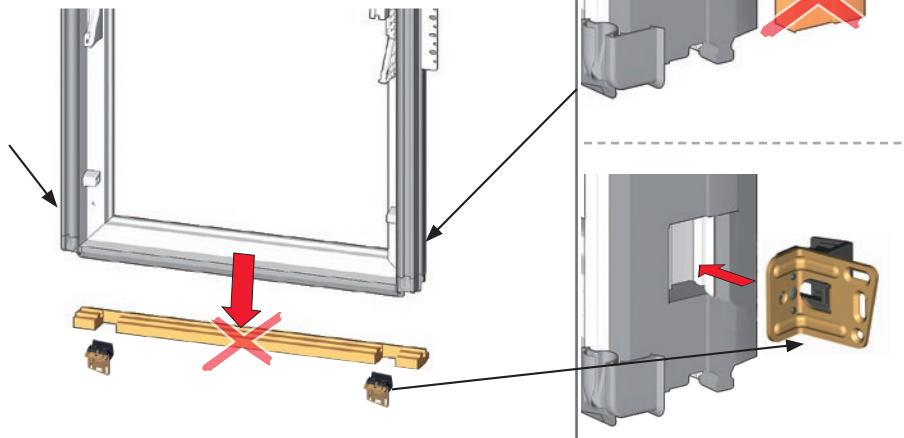


9

Rx 200 TO

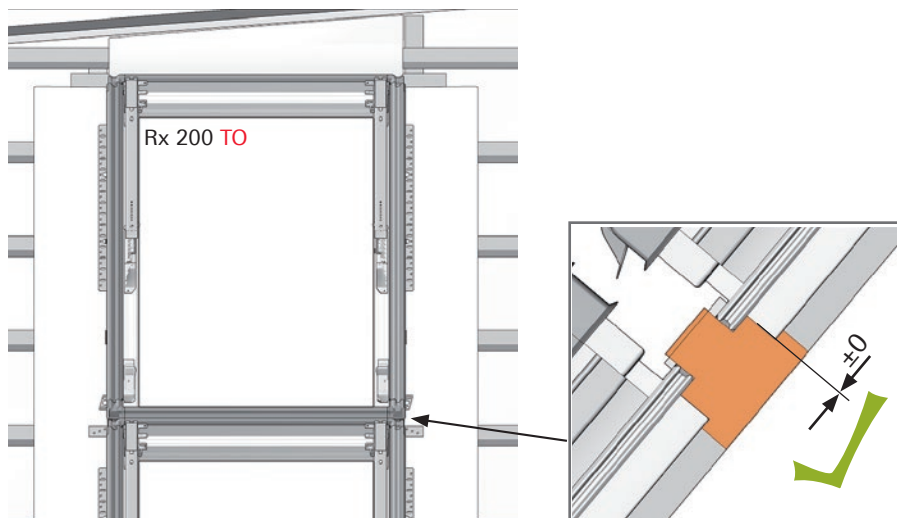

10

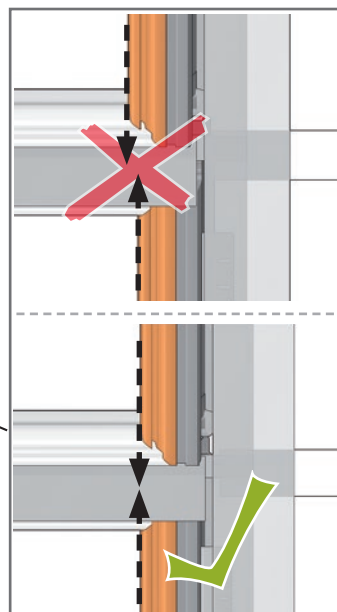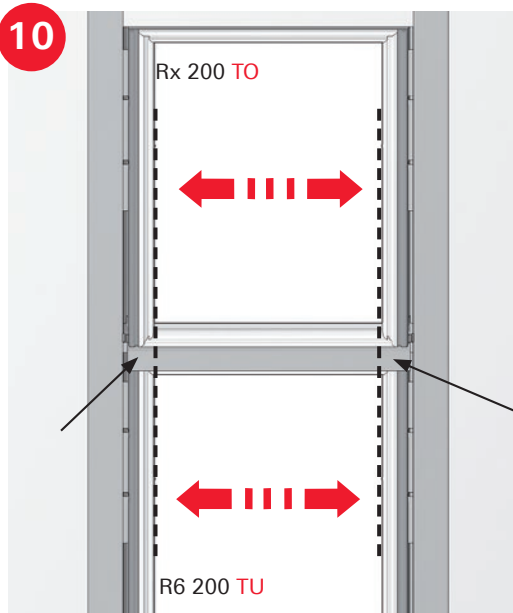


11

Rx 200 TU/TO




12




OK ?

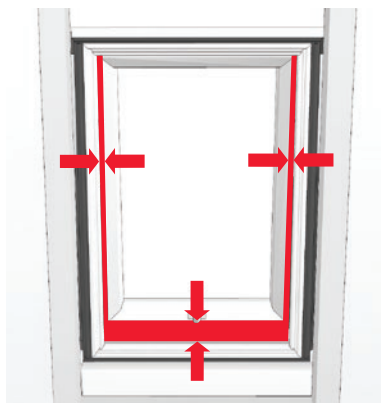



R6 200 TU

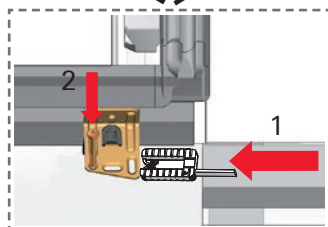


13

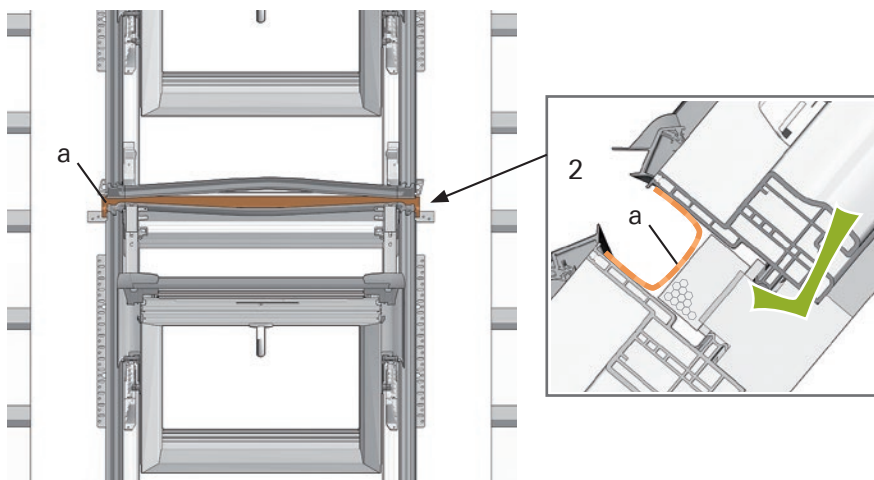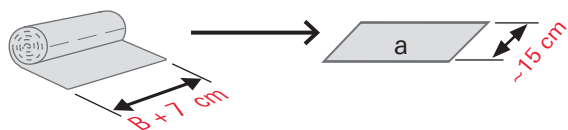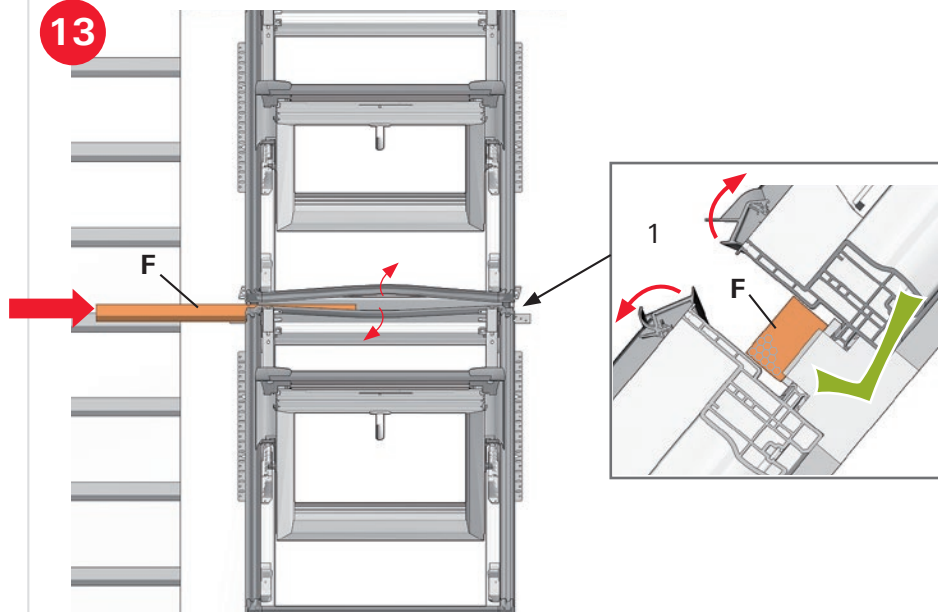



14

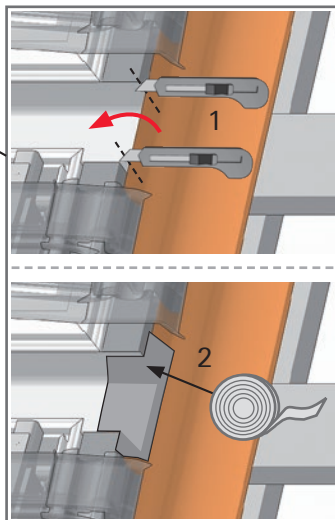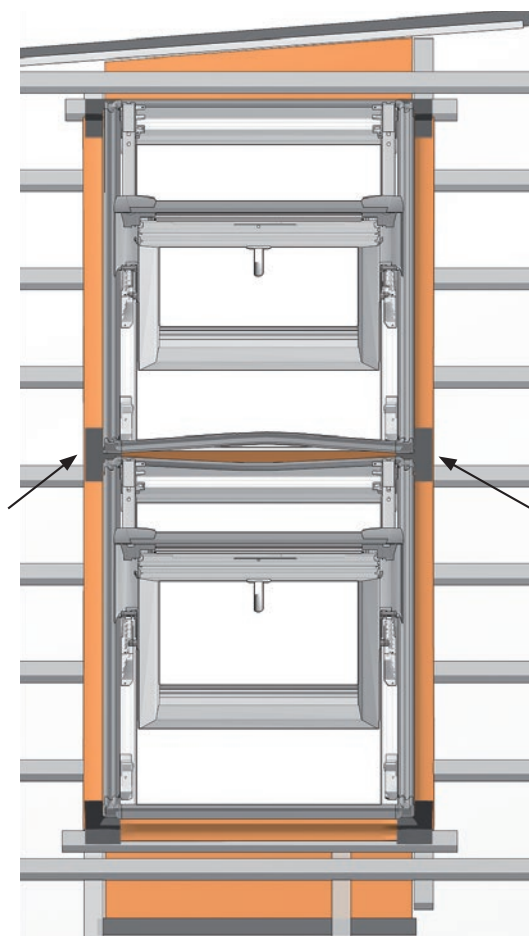




15

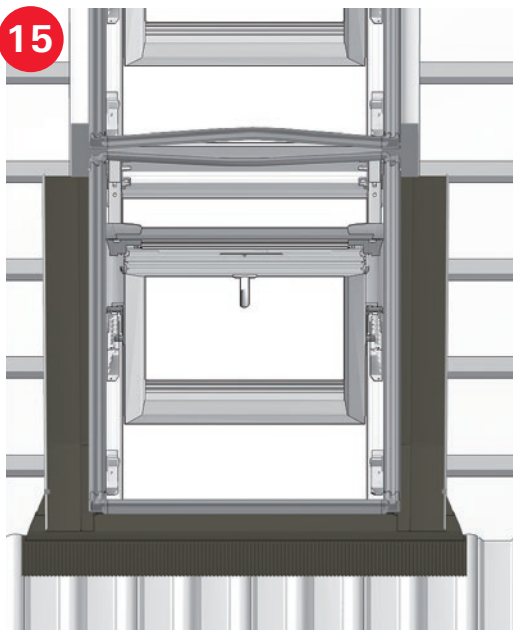


16

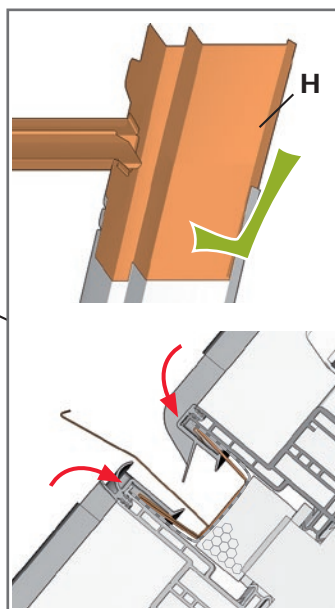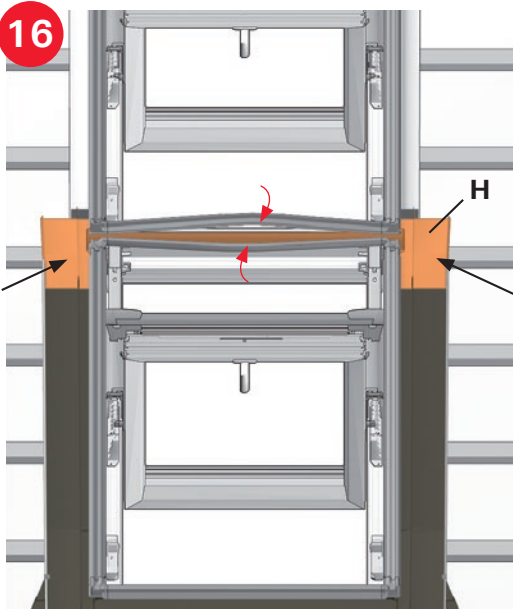

17

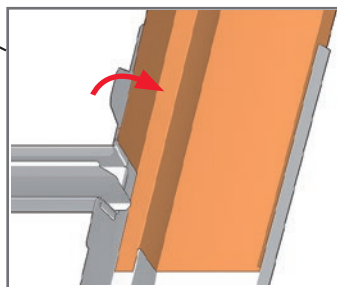
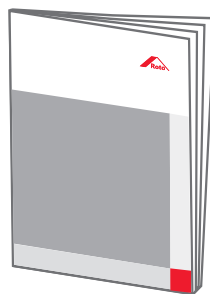
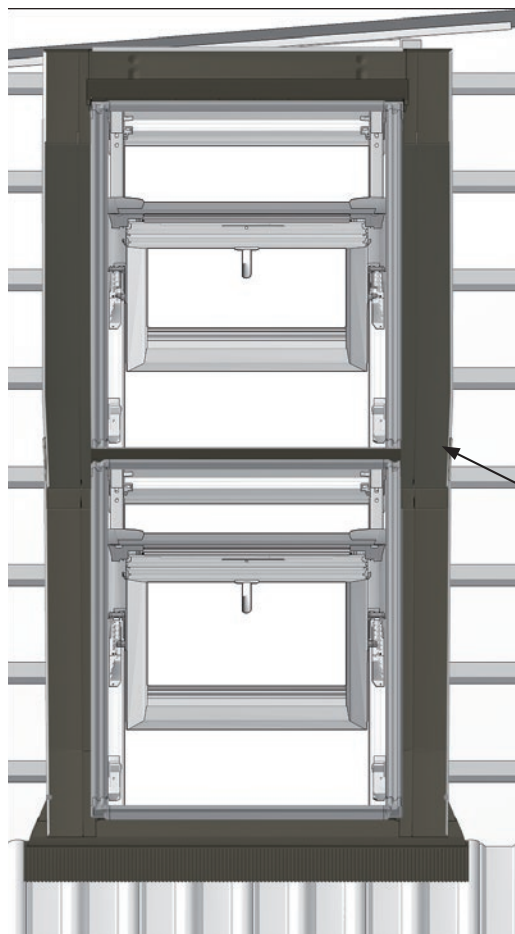


18

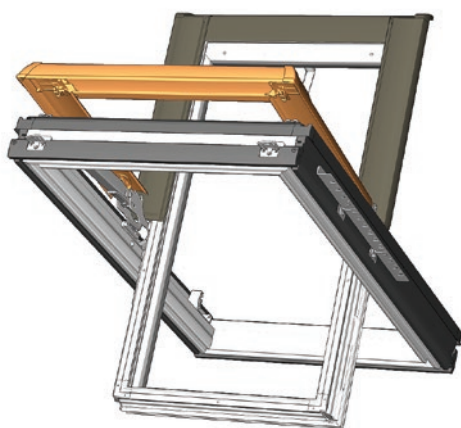

18a



R6 200 TU

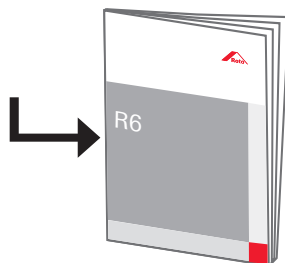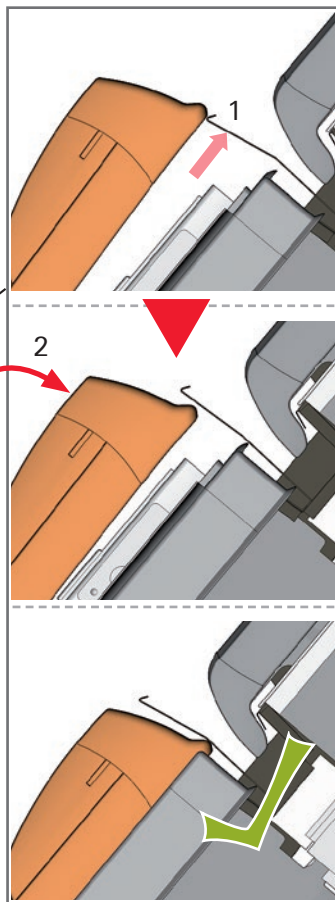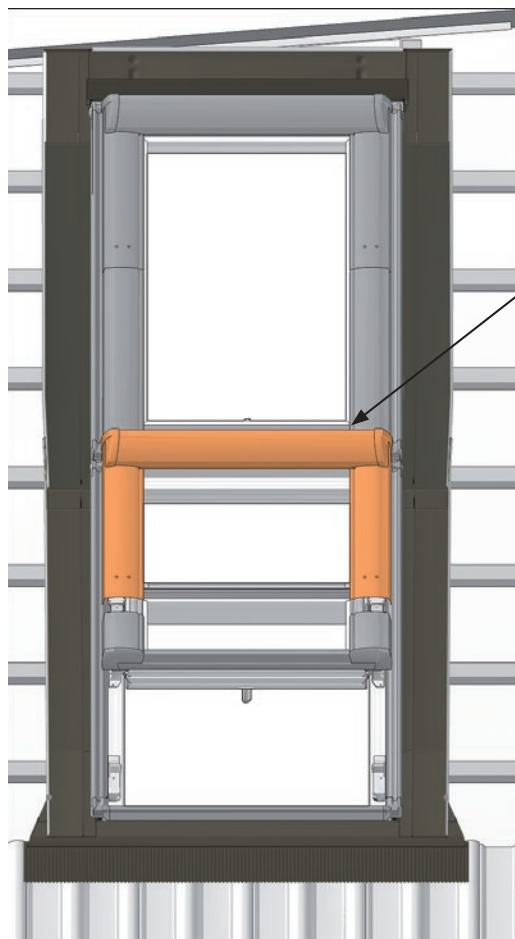


19




R6 200 **TU**

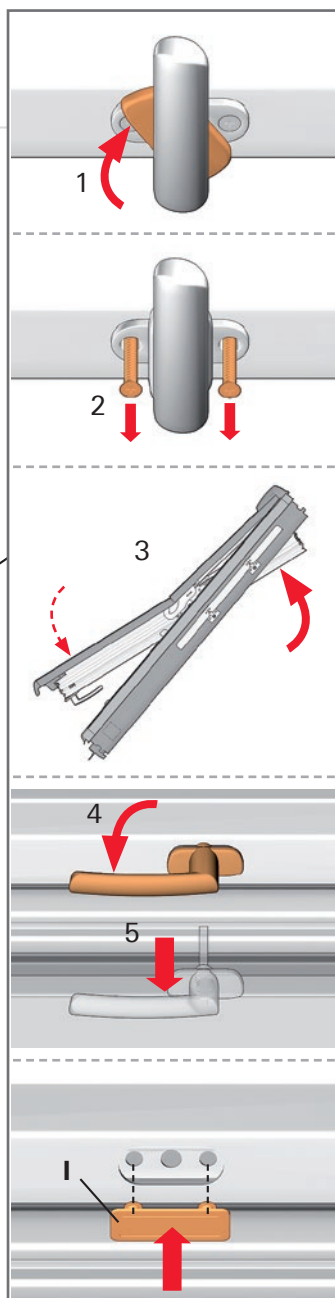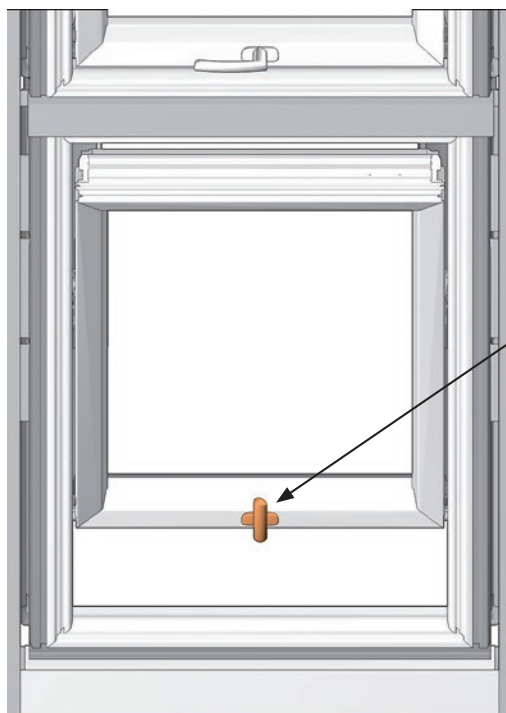

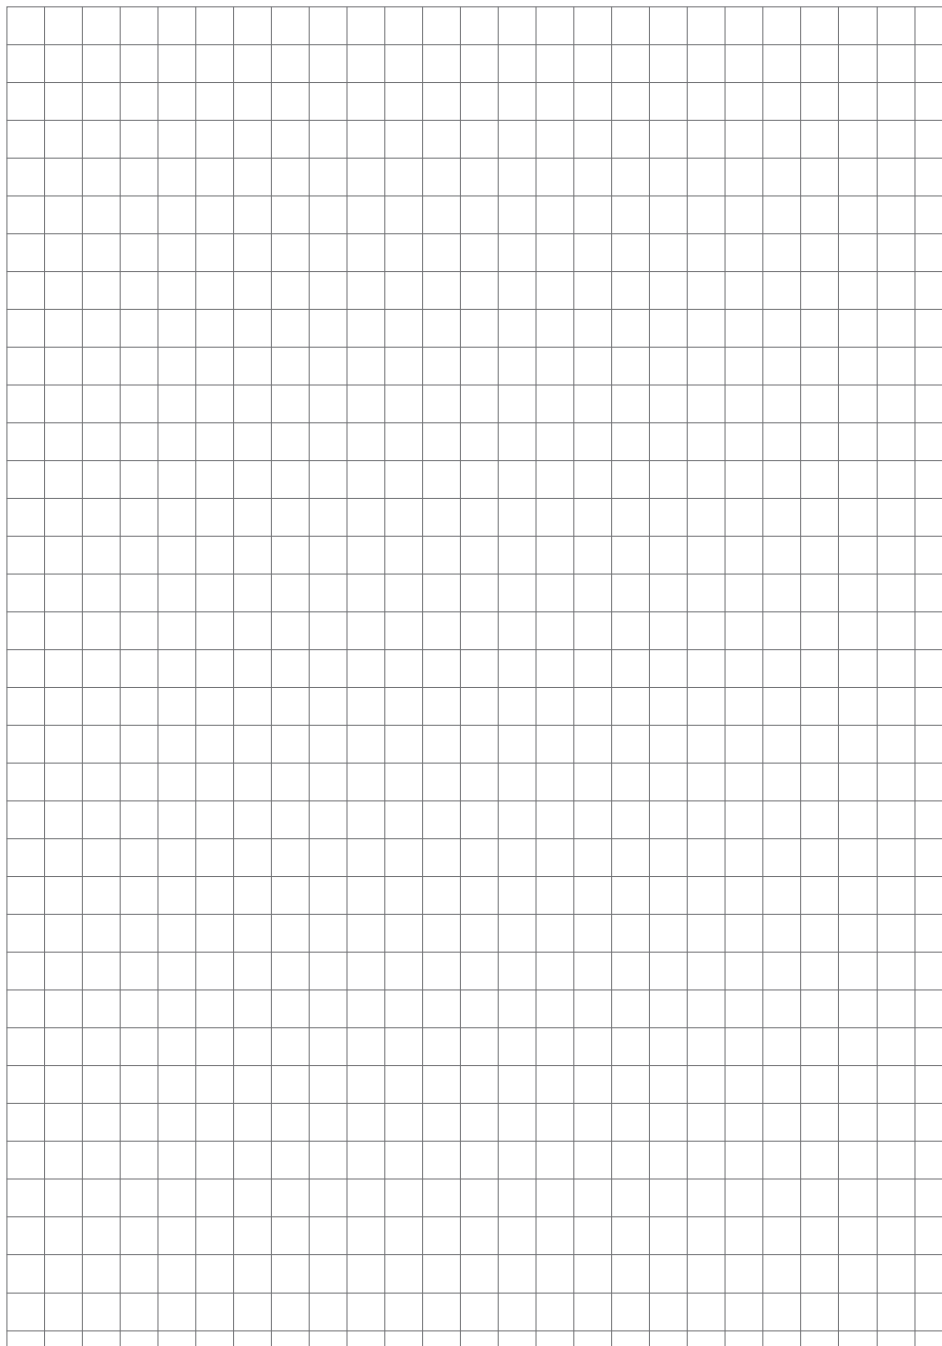



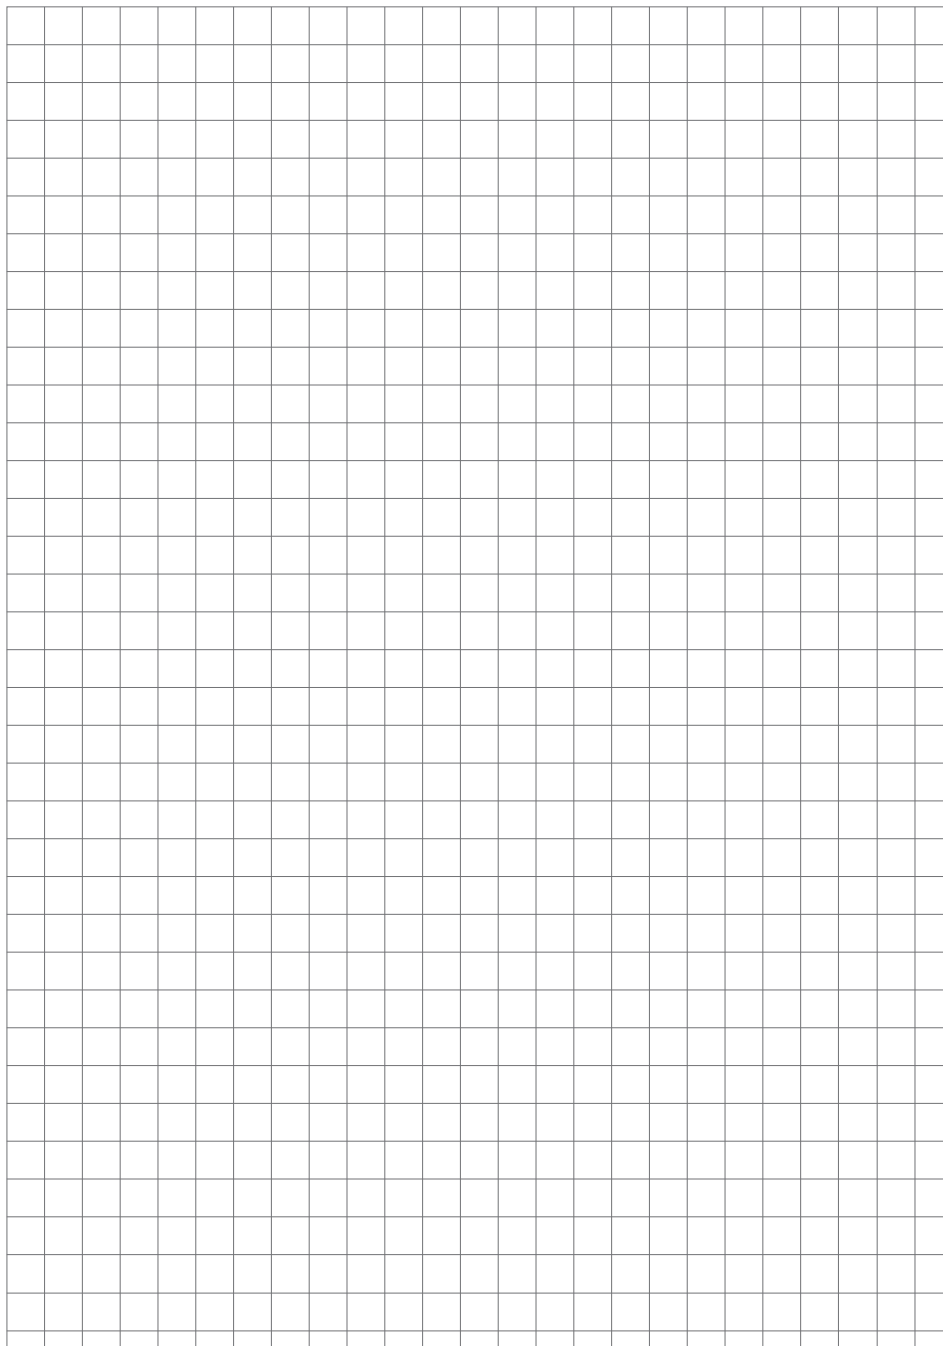



The roof window.



www.roto-contacts.com



www.roto-extra.com

Roto Frank DST Vertriebs-GmbH
Wilhelm-Frank-Straße 38-40
97980 Bad Mergentheim
Deutschland

